

DENVER BAS-18250M

English User Guide

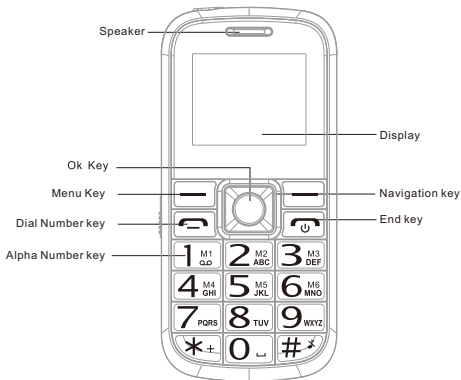 


Table of contents	
Table of contents	1
1 Foreword	2
2 Safety	3
3 Knowing the Keys	5
4 Preparing Your Phone	6
4.1 <i>Installing SIM Card</i>	6
4.2 <i>Installing Memory Card</i>	6
4.3 <i>Installing Battery</i>	7
4.4 <i>Removing Battery</i>	7
4.5 <i>Charging Battery</i>	7
5 Menu functions	8
5.1 <i>Messages</i>	8
5.2 <i>Call center</i>	10
5.3 <i>Phonebook</i>	12
5.4 <i>Multimedia</i>	12
5.5 <i>Extras</i>	15
5.6 <i>Settings</i>	16
5.7 <i>Reminder</i>	18
6 Accessories	20
7 Caring for Battery	20

1 Foreword

Thank you for choosing this mobile phone – you have made a wise choice, congratulations!

Our cellular phones are approved for GSM networks and meet stringent European standards. Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network.

Please contact your service provider for more information. This User Manual is published by the manufacturer without any warranty. Revisions and improvements resulting from typographical errors, inaccuracy of current information, and improvements to the device or software may be done without any prior notification, but will be incorporated into newer editions. More information and help on your phone may be available at the manufacturer's website. The manufacturer reserves all rights to the contents herein.

Copyrights and trade marks mentioned in this document remain with their respective owner, Reproduction, transfer, storage, or distribution in whole or in part of copyrighted materials without prior written permission is expressly prohibited. We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

2 Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When traveling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.

Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:

- Against the ear: place or receive a phone call and hold the phone as you would a wire line telephone.
- Body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 2.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 2.5 cm from your body,
- Data operation: when using a data feature, position the phone a minimum of 2.5 cm from your body for the whole duration of the data transmission

3 Knowing the Keys

1. Left soft key/Right soft key: Implement the functions shown in the lower left /right hand corner.

2. Call/Answer (Green) Key

Press after dialing to connect.

Press if there is an incoming call to answer.

Press from standby to go to call records list.

3. End/Power key: Long press to switch phone on/off; Press to end, reject call; or to exit a menu.

4. OK key: Confirm or accept selection in Main menu.

5. Navigator keys: Press the up/down/left/right direction in menu to scroll, browse or in edit page to move cursor. In idle mode, press the up/down/left/right direction keys to select the shortcut function showed on the top of the screen, and then press the OK key to confirm.

6. 0-9 alphanumeric keys: Press corresponding keys to input numbers when dialing or numbers and characters when editing.

From Standby: "0"key to 0

"1"key to Voice mailbox

Long press "2" to "9" key to Speed dial numbers (as defined in the menu.

7. * (Star) Key: "*" key to "+pw"

8. # (Pound) Key: Press in standby to input "#" symbol. long press from standby to activate or deactivate silent mode.

4 Preparing Your Phone

4.1 Installing SIM Card

Please keep your SIM card away from reach of children. Scratches and bends can easily damage the SIM card. Please be extra careful when installing, removing, handling or storing your SIM card.

Before installing or removing the SIM card, make sure the phone is switched off, and remove the back cover and battery.

Note: Find SIM card's groove in the back of phone and slide it completely there. During installation, please make sure that the chip is facing downwards and pay attention to slot direction.

4.2 Installing Memory Card

This phone supports the memory card function. Please ensure the memory card is inserted correctly before using.

Note that when the phone is shook, the memory card is likely to slide from its groove, so please do not warp and scratch the memory card, or make it contact static electricity, dust or immerse in water.

Find memory card's groove in the back of phone, make the chip face to back of the phone and pay attention to the slot direction, slide the memory card as shown in the figure until it is entirely inserted into its groove.

Note that the phone doesn't support U-disk function. If you need store the audio and image files into the memory card, you must copy the files to the memory card by the card reader or another device.

Please be careful when using a memory card, especially when inserting and removing it. Some memory cards must be formatted in PC before it is used for the first time.

**Please regularly backup information in the cards on other equipment when you use MicroSD cards!
Improper use or other uncertain factors may cause the damage or loss to the content in the card.**

4.3 Installing Battery

1. Align the battery chip with the metallic salient point in battery jar, insert the battery and press top of the battery downwards as per the arrow direction until it is inserted into the battery jar.
2. Slide battery cover into back of the phone until it is locked.

4.4 Removing Battery

First switch off the phone and make it face downwards, push the battery cover to top of the phone, get its top and remove it.

Note: All settings or information stored in SIM card and the phone may be lost when the battery is removed.

Please remove the battery when the phone is switched off, because it may suffer from abnormality if you remove the battery when it is switched on.

4.5 Charging Battery

Unclose dustproof soft gum of attachment mode on the bottom of the phone; insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet. If the phone is switched on and the battery power icon stripes in right hand of the screen are rolling, then it is charging; if the stripes are full and have stopped rolling, it is fully charged. If the phone is switched off when charging, a large charging sign will display in screen. After charging is finished, just pull out the plug.

5 Menu functions

5.1 Messages

5.1.1 Write message

- Text message

Function: Compose a new message, save and/or send it to the recipient.

Note: to send SMS, you may need to set the correct SMS service center number which can be obtained from network provider.

While composing, press the # key to change input method, a text message can be up to 160 characters in length.

Press the Left Soft key [Options] to select options when editing:

- **Send to:** Send the composed message, input the recipient's number using the keypad or select a contact from Phonebook.
- **Insert template:** Choose preset SMS.
- **Advanced:** Select the option want to insert number, name, contact and expressing symbol.
- **Save:** Save the message to drafts.

Note: 1. to send SMS, you may need to set the correct SMS service center number which can be obtained from network provider.

2. If [SMS settings/Common settings/Save sent message] is [On], the sent successfully/unsuccessfully SMS will be both saved to Outbox; otherwise the SMS will not be saved.

5.1.2 Inbox

Received SMS messages can be stored either in phone or in SIM memory, and are accessed here.

When you have received a message, the tones or vibration (as defined in the menu **[User profiles/Profile options/Customize/Tone setup/Message tone]**) to alert you and message mark will also be shown on the screen. Press **the Left soft key** [Read] or the OK key to read the new message, press **the Right soft key** [Back] to return, and you can access the inbox to read the new message.

If the message memory is full, the indication "Memory full" and the message icon will be shown on the screen flashing. Before you can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox, the information will be lost and incomplete.

In message list, press **the OK key** or **the Left soft key**

[Options] to make the following menu:

- **Reply:** Reply to the SMS sender directly.
- **Call sender:** Call the message sender directly.
- **Forward:** Forward the message to someone else.
- **Delete:** Delete the messages.
- **Advanced:** you can choose copy to phone and Move to phone etc function.
- **Save to Phonebook:** Save the numbers to phonebook

5.1.3 Drafts

Incompletely composed and saved messages can be organized and accessed here.

5.1.4 Outbox

If [Save and send] option is selected when sending the message, the sent SMS will be saved to Outbox.

In sent message list, press **the OK key** or **the left key** to read the selected message.

5.1.5 Sent messages

If message is sent successfully, the sent SMS will be saved to Outbox.

5.1.6 SMS Settings

Sets and save SMS service parameters of SIM card.

5.2 Call center

5.2.1 Call logs

- Missed/Dialed/ Received/All calls

Display list of all/missed/dialed/received calls.

- Delete call logs

Delete dialed / missed / received / all calls

Once on the call records list, press **the Call/Answer (Green)**

Key to make a call; press **the OK key** to view details, press **the Left soft key** [Options] to make the following options:

- **View:** View the details of the call.
- **Call:** Dial the number of the other party.
- **Send text message:** Compose and send a SMS to the other party.
- **Save to phonebook:** Save the call records to phonebook.
- **Add to Blacklist:** Add contacts to the blacklist
- **Delete:** Delete the current call record.

-Call timers

Record all calls timers.

5.2.2 Call settings

- SIM1/SIM2 call settings

You can select SIM1 or SIM2 to set the call settings options as below.

- **Call waiting (supported by the network):** You can switch on and off or check for the call waiting function.
Switch on call waiting, and you will hear warning alert tone if there is a new incoming call during a call, with a phone number of another call on the screen.
- **Call divert (supported by the network):** Divert your incoming calls to voicemail or other numbers. There are three diverting ways, each of which can be set to divert to voice Mail or to the other number, off or check status.

- **Call barring** : Restrict to answer or dial the call in any situation. You need to apply to the network operator for opening the international long-distance function and get network restricting code for barring setups. Any item of call barring can be set to on, off or check status. Call barring includes:
 - **Line switching***: Some SIM cards and operators may support two lines; this function allows you to switch between the lines. It will be indicated by an icon on your standby screen status bar. Please inquire with your service provider for more details.
 - Advance settings
 - **Auto redial**: Switch on or off auto redialing function. When switched on, if the receiver does not answer in dialing, the phone will automatically redial the number. The maximum redial times are 10. And during this period, the subscriber cannot dial any other number. Press the End/Power key or the Right soft key [Cancel] to end auto redial.
 - **Call time reminder**: To have your phone alert you with a beep for every fixed time intervals (Periodic) or once (Single) during a call, press the OK key and select either Off; Single; or Periodic; if selected to activate, press the OK key again and input time interval in number of seconds (1-3000 for single; 30 – 60 for periodic) and then press the OK key again to confirm.
 - **Connect notice**: Call connect notification.
 - **Answer mode**: use the OK key or the Left soft key to turn any key on or off, if activated, you can answer incoming calls just by any key except the Red key and the Right soft key.
 - **Magic voice**: Simulate the voice of people of all ages

5.3 Phonebook

• Add new contact

This menu allows you to add a new record to the SIM card or the Phone. Enter the phone number directly in standby mode, then press **the OK key** to save the phone number in the SIM card or the Phone.

First you need to select storage: To SIM or To Phone.

• **To SIM:** Select this option, press **the OK key** or press **the Left Soft key [Edit]** to enter name input interface and input the corresponding name, then press **the OK key** or press **the Left soft key [Options]** to select 'Done' and confirm.

Press the Navigator key to switch to number column, enter the phone number directly and confirm, finally press the OK key or the Left soft key [OK] and confirm to save, adding records to the SIM card will be done.

• **View:** Display details of the currently recorded.

• **Send text message:** Send a text message to the currently recorded.

• **Call:** Dial the currently selected phone number..

• **Edit:** Modify the currently selected contactor record.

• **Delete:** Delete the currently selected record.

• **Copy:** Copy this record to SIM card if it is saved in phone and vice versa.

• **Mark several:** You can mark multiple items.

• **Phonebook settings**

5.4 Multimedia

5.4.1 Image viewer

Entering this option, you can conveniently view photo list saved in album, press **the OK key** to view the selected photo, press **the Left soft key [Options]** to make the following operations:

- **View:** View the currently selected photo.
- **Send:** Send the photo via the Bluetooth.
- **Use as:** Be used as Wallpaper/Screen saver/power on display/power off display
- **Rename:** Change the name of the photo.
- **Delete:** Delete the current photo.
- **Storage:** Select [Phone] or [Memory card] as photos' saving position.
- **Image information:** Display the information of the selected photo.

5.4.2 Video player

This menu allows you to playback videos stored in your phone or memory card. Note: The phone supports video with .avi/.mp4/.3gp format.

Enter video preview interface, press **the OK key or the Left soft key** [Options] to make the following operations:

- **Play:** Play this video. You need to repress the OK key to start playing when screen displays start interface.
- **Send:** Send the video through MMS, Bluetooth.
- **Rename:** Change the name of the video.
- **Delete:** Delete this video.
- **Storage:** Select [Phone] or [Memory card] as videos' saving position.

5.4.3 Music Player

Play the audio files saved in the phone or memory card.

In playing interface, press **ok keys** to select ◀ / ▶ 'play/pause', ■ 'stop', press **4/6 keys** to select ⏮ / ⏭ 'previous/next'; press the Up soft key and the Down soft key to adjust player volume. Press **the Left soft key** [List] to enter playing list interface, press **the Left soft key** [Options] to access the operation menu of MP3 player.

5.4.4 Sound recorder

Your phone can record phone conversations made and record non-call sounds in AMR, WAV or AWB format.

Select 'Record' option, use **the Left soft key** to start or pause recording, use **the Right soft key** to stop recording, select 'Yes' to store the recorded audio.

Once that you have recorded audios, scroll to the file and press **the Left soft key** [Options] will make following options available:

- **New Record:** Record a new audio.
- **Play:** Play the current audio.
- **List:** Show all the recordings of sound..
- **Settings:** Use the left or right navigator key to choose the storage, file format or audio quality.

Select a recording and press the Left soft key [Options] will make following options available:

- **Play:** Play the current audio.
- **Rename:** Change the name of the audio.
- **Delete:** Delete the current audio.
- **Use as:** Use as user profiles.
- **Send:** Use the audio file as ring tone in the user profile or send it via MMS, Bluetooth.
- **Details:** Explain sound recorder details.

5.4.5 FM radio

FM radio is supported by the phone. Access the function only when you plug an earphone, as this works as antenna.

In FM radio interface, Press **the Left/Right navigator keys** to forward/backward the channel auto search, unless a channel is found. Press **the Up/Down navigator keys** to decrease/increase by 0.1MHz.

Use the ***/# key** to adjust the volume.

Press the **OK soft key** to pause the FM playback, Press the

Left soft key [Options] to access the following menu: Channel list, Manual input, Auto search and Settings.

5.4.6 File Manager

The currently available memory locations are shown in the file manager interface (Phone or memory card), the Total and Free memory are shown on top.

Press the **Left soft key** [Options] for:

- Open

Scroll to a file (file types not supported will have an icon with question mark) and press the **Left soft key** [Options] for

following options (in addition to the folder options above):

- **Open:** enter or open the selected drive.
- **New folder:** create a folder in the currently selected drive.
- **Rename:** modify the name of the folder (file, if on file

options).

- **Delete:** delete the current folder.

- Format

Delete all

- Details

Details of the file

5.5 Extras

This option provides some practical function: Services, File Manager, Calculator, Calendar, World clock, Shortcuts.

5.6 Settings

5.6.1 User Profiles

Customize alert preferences.

You can customize your alert profiles for different events and environments. Follow the above path and scroll to either:

General, Silent, Meeting, Outdoor profile , press **the Left soft key** [Options] and select 'Activate' to use the profile. Select 'Customize' to set the following:

- **Alert type:** press the OK key to set alert type.
- **Ring type:** Scroll to Beep once (Only a sound), Repeat (play ring tone repeatedly until you have acted on the event).
- **Ringtone:** Set alert tones of Ringtone.
- **Ringtone volume:** Use the Up and Down navigator keys to adjust ring tone and keypad tone volumes.
- **Message:** Set alert tones of Message tone.
- **Message volume:** Use the Up and Down navigator keys to adjust message ring tone.
- **Keypad:** Set alert tones of Keypad tone.
- **Key tone volume:** Use the Up and Down navigator keys to adjust Keypad tone volume.
- **System alert:** activate or deactivate system alert.

5.6.2 Super Battery

You can switch this on to enter power saving mode.

5.6.3 Dual SIM settings

You can choose to set different SIM card

5.6.4 Phone settings

- Time and date

- **Set time/date:** use the left or right navigator key to move the cursor to position and use numeric key pad to enter value and the up or down navigator key to select between setting time and setting date fields, press **the OK key** when done to save.

- **Set format:** Set the format of the time and date.
- **Update with time zone**
- **Auto update time:** Automatic updates the network time.
- **Schedule power on/off**

Timer switch setting.

- **Language**

You can select the operation language of the phone.

- **Pref. input method**

Set phone's default input method every time it enters edit mode according to your usage habit.

- **Display**

Personalize your display according to your preference.

- **Wallpaper:** Select wallpaper from the preset wallpaper (System) or file manager (User defined) for your phone; it is the background image on your standby screen. Select [Wallpaper Slide*] option, you can select the folder which stored the pictures from preset wallpaper or file manager for your phone, if activated; the wallpaper can be switched automatically by pressing the End/Power key in idle mode.

- **Screen auto lock:** Standby interface does not operate the phone, after a period of time, the mobile phone is automatically locked.

- **Keypad backlight time**

Set keyboard light switch and auto extinguish time.

- **Dedicated keys**

Set and customize functions of the four navigator keys when pressed in standby.

The up/down/left/right navigator keys may serve as shortcut keys to access specific functions from standby, these function assignments may be altered here according to your usage preference and habits. Scroll to the key that you want to change and press **the OK key** to get the available functional selections, scroll to the desired function and press **the OK key**.

- Flight mode

Active or deactivate .

• Misc. setting

LCD backlight: Set the backlight of the time.

5.6.5 Network settings

You can set up to the network data transmission.

5.6.6 Security settings

You can set security options of the phone under this menu so that the phone or the SIM card cannot be illegally used.

5.6.7 Connectivity

Bluetooth: Through Bluetooth, you can send files to another cell phone.

5.6.8 Fake humantone

Switch for voice broadcast

5.6.9 SOS

Set SOS switch and number, press OK key in case of emergency can dial the set SOS number, not connected will automatically send a short message for help.

5.6.10 Restore settings

To return your phone's settings to their original values as when it came out of the factory, enter the phone password, select [Yes] to reset and reboot (power off and on again the phone).

5.7 Reminder

This phone can set five alarm clocks at most, which still work in phone switched-off status.

When the alarm time is reached, press the **Right soft key** or the **Red key** to stop; press the **Left soft key** to snooze, the alarm will remind you again after snooze time if snooze is selected.

From alarm clock list displayed in alarm clock menu select an alarm clock and press **the Left soft key** [Edit] to enter its setting menu, and specific operation steps are as follows:

1. Activate or deactivate the alarm by selecting 'On' or 'Off'. If an alarm is activated, this alarm will be selected by '•' and an alarm icon will display in idle screen.
2. Edit alarm time by the numeric keys.
3. Press **the Left/Right navigator keys** to select if the alarm is to Repeat Once; Everyday; or days (default is from Monday to Friday, and user can set several days in a week as required).
4. Choose one ring tone or channel from FM radio in the list as alarm ring.
5. Press **the Left/Right navigator keys** to select snooze time.
6. Press **the Left/Right navigator keys** to select alarm alert type.

After editing above options, press **the Right Soft key** [Done] and confirm saving, then alarm clock icon displays in idle mode upside.

And you can also follow the same procedure to save the alarm settings after modifying.

6 Accessories

Use only batteries, chargers, and accessories approved by the manufacturer of this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

Extra Battery

Charger Plug, charger cable

Charger plug used to connect with the charger cable for charging on wall outlets. Also you can use the charger cable to connect with the other devices such as smartphones to charge the phone.

Charging time is about 2 to 3 hours. The charging condition is displayed on screen. You may use your phone while charging.

7 Caring for Battery

This phone uses a rechargeable battery as power source, when the charge is weak, recharge immediately to protect the battery life. It is best to drain the battery charge first.

When not using the charger, unplug it from the power source and the phone. Over charging will shorten the battery life. Don't leave the charger connected to the unit or battery for more than a week.

Temperature affects battery charge capacity.

Your battery may need to be warmed up or coolen down before charging. If the battery temperature is lower than 0°C and higher than + 45°C, it will not recharge.

Use the battery as it is originally intended. Do not short circuit the battery by connecting the positive and negative terminals with a conductor.

Do not use a damaged battery.

The battery will not perform properly and its life will be shortened if exposed to extreme temperatures.

Do not place the battery in fire, follow local laws and ordinances in disposing used battery.

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly. Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type BAS-18250M is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write modelnumber: BAS-18250M. Now enter product page, and red directive is found under downloads/other downloads

Operating Frequency Range:900MHz/1800MHz

Max Output Power:5.55W

WARNING LITHIUM BATTERY

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

 
Denmark

www.facebook.com/denverelectronics

DENVER BAS-18250M

English User Guide

1 Phone Display

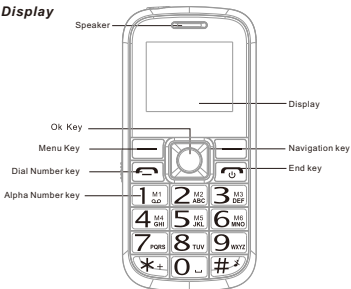

2 Key

Key	Function
Alpha Number key	Make or answer a call View Call logs in standby mode
End Key/ Power Key	Press and hold to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left soft Key	Access the Menu in idle mode. Confirm to enter the menu.
Right soft Key	Access the contact list in idle mode. Return to the previous menu.
OK Key	Press to enter main menu in idle mode. In idle mode, press and hold to start SOS. After entering the number, press this button to add a contact.
Number Key	Enter numbers, letters or characters. Select a submenu item labeled with the corresponding number.
*	Press to toggle between *,+, (pause character) P, and(wait character)W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to change profiles to Silent Mode and General mode.
Navigation Keys	In idle mode, press up key to access Reminder, press down key to access Shortcuts; press left key to access Write SMS, press right key to access Multimedia. The user can define your own shortcuts for navigate keys within a menu, press up, down, left and right to scroll through menu option.

Note: "Press" in this manual, means to press and release the key; "press and hold" means to Press and hold the key for at least 2 seconds.

3 Function Menu

4 Main Menu

All function options about the mobile phone are listed as below with brief descriptions

Phone book	
New	To add New Contact
View	To View contact info
Send text message	To send SMS to contact
Call	To dial the contact directly
Edit	To edit contact name and number
Delete	To delete the selected phone book entry.
Copy	To copy the selected contact to your phone or SIM card
Mark several	To send messages or delete multiple contacts
Phonebook setting	Settings for speed dialing, fixed dialing, copying all contacts, moving all contacts, deleting all contacts, etc.

Multimedia	
Image viewer	To play the saved images
Video Player	To Play the recorded movie
Music Player	To play the music
Sound recorder	To record the sound
FM radio	To receive the FM broadcast
Settings	
-User profiles	
To perform the settings related to security including general, silent, meeting, outdoor	
-Super Battery	
Enter the power saving mode	
-Dual SIM settings	
Only SIM 1 open, Only SIM 2 open, dual SIM open	
-Phone settings	
To set things like time and date, power on/off, language, Pref. input method, display, dedicated keys, flight mode, misc. settings	

-Network settings
Set up to the network data transmission
-Security settings
Set security options of the phone under this menu so that the phone or the SIM card cannot be illegally used
-Connectivity
Through Bluetooth, you can send files to another cell phone
- Fake human tone
Switch for voice broadcast
-SOS
Set SOS switch and number, press and hold OK key in case of emergency can dial the set SOS number, and will automatically send a short message for help
-Restore settings
Restore all settings as before.
Call center
View missed calls, make calls, call records of received calls, and save, delete views, etc. You can also set auto redial, call time reminder, connect notice, answer mode, magic voice, call waiting, call divert, call barring, etc.
Message
-Write message
To create a new SMS
-Inbox
To view the received messages
-Drafts
To save the messages that are not ready to send out, in order to further edit, and then send.
-Outbox
To view the message in sending or sent unsuccessfully
-Sent messages
To view the sent messages
-SMS settings
Sets and save SMS service parameters of SIM card.
Reminder
Turn the alarm on or off, set the alarm parameters and save. Up to 5 alarms can be set for this phone, and the alarm will also work when phone is turned off.
Tools
To perform the features including Services, File manager, Calculator, Calendar, World clock, Shortcuts

5 Safety Information and Notice

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

Do not switch on your phone when phone is prohibited or when phone use may cause interference or danger
Do not use your phone while driving.
Following the rules or regulations in hospitals and facilities. Switch off your phone near medical equipment.
Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to do service or repair the phone.
Do not place your phone or its accessories in areas with strong electromagnetic field.
Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.
Do not put your phone in a high-temperature place with flammable gas such as a gas station.
Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
Only use original battery and charger to avoid problems.

6 Phone common problems and solutions

Frequently Asked Questions	Cause and Solution
Fail to turn on	Press the "power on" key for more than 1 second. Check if the battery is properly connected. Please remove and install it again, and try to turn it on again. Check if the battery is properly charged
Fail to connect network	Weak signal. Please Try and move to a location with strong signal and try connecting to the network again; Please ensure that you are not beyond the network coverage of service providers; Please ensure you have a valid SIM card. Please contact your network provider for further information.
SIM Card Error	Dirt on the metal surface of the SIM card. Use clean cloth to wipe the metal touch point on the SIM card. A SIM card is not installed. The SIM card is damaged. Please contact your tele provider.
Fail to charge	Poor contact. Please check if the plug is connected well. Charge in the environment below 40 C or above 55 C. Please change your charging environment. The battery or charger is damaged. You need to replace it.

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly. Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type BAS-18250M is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write modelnumber: BAS-18250M. Now enter product page, and red directive is found under downloads/other downloads

Operating Frequency Range:900MHz/1800MHz

Max Output Power:5.55W

WARNING LITHIUM BATTERY

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

 
Denmark

www.facebook.com/denverelectronics

DENVER BAS-18250M

Bedienungsanleitung

1. Telefondisplay

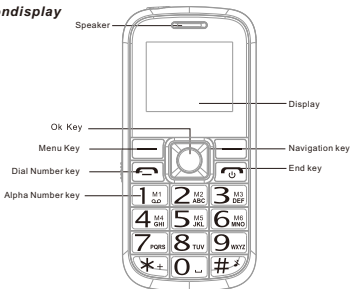

2. Tasten

Taste	Función
Rufnummertaste	Realiza o responde a una llamada Ve los registros de llamadas bajo el modo "en espera".
Ein-/Aus-/Auflegetaste	Manténgala pulsada para encender / apagar el teléfono. Finaliza una llamada o rechaza una llamada entrante. <u>Vuelve al modo inactivo.</u>
Linker Softkey	Accede al menú en modo inactivo. Confirma para entrar en el menú.
Rechter Softkey	Accede a la lista de con tactos en modo inactivo. <u>Vuelve al menú anterior.</u>
OK-Taste	Für den Wechsel zum Menü im Untätigkeitsmodus drücken. Im Untätigkeitsmodus gedrückt halten, um SOS zu starten. Diese Taste nach der Nummerneingabe drücken, um den Kontakt hinzuzufügen.
Zifferntaste	Eingabe von Ziffern, Buchstaben oder Sonderzeichen. Auswahl des mit der entsprechenden Ziffer gekennzeichneten Untermenüs.
*	Zum Umschalten zwischen *, +, (Pausezeichen) P und (Wartezeichen) W drücken. Zum Entsperren des Displays drücken.
#	Zum Umschalten des Eingabemodus während der Eingabe drücken. Für die Profiländerung auf «Lautlosmodus» und «allgemeiner Modus» drücken.
Navigation Keys	Im Untätigkeitsmodus für die Erinnerungen die Nach-oben-Taste, für den Zugriff auf die Schnellzugriffe die Nach-unten-Taste, zum Schreiben einer SMS die Nach-links-Taste und für den Multimediazugriff die Nach-rechts-Taste drücken. Der Benutzer kann den Navigationstasten eigene Schnellzugriffe zuweisen; zum Durchsuchen der Menüoptionen die Nach-oben-, Nach-unten-, Nach-links- und Nach-rechts-Taste drücken.

Nota: "Pulsar" en este manual, indica pulsar y soltar la tecla; "mantener pulsado" significa mantener pulsada la tecla durante al menos 2 segundos.

3 Menú de funciones

4 Menú principal

Todas las opciones de funciones del teléfono móvil se enumeran debajo con una breve descripción

Agenda telefónica	
Nuevo	Para añadir un nuevo contacto
Ver	Para ver la información de los contactos
Enviar un mensaje de texto	Para enviar un SMS a un contacto
Llamar	Para marcar directamente el contacto
Editar	Para editar el nombre y el número de un contacto.
Eliminar	Para eliminar la entrada de la agenda telefónica seleccionada.
Copiar	Para copiar el contacto seleccionado al teléfono o tarjeta SIM.
Marcar varios	Para enviar mensajes o eliminar múltiples contactos
Configuración de la agenda telefónica	Configuración para marcación rápida, marcación fija, copiar todos los contactos, mover todos los contactos, eliminar todos los contactos, etc.

Multimedia	
Visor de imágenes	Para reproducir las imágenes guardadas
Reproductor de vídeo	Para reproducir el vídeo grabado
Reproductor de música	Para reproducir música
Grabadora de sonidos	Para grabar el sonido
Radio FM	Para recibir la emisión FM
Configuraciones	
-Perfil de usuario	
Para realizar la configuración relacionada con la seguridad incluyendo general, silencio, reunión, exterior	
-Súper batería	
Entra en el modo de ahorro energético	
-Configuración de la SIM dual	
Solo abierta SIM 1, solo abierta SIM 2, SIM dual abierta	
-Ajustes de teléfono	
Para configurar cosas como fecha y hora, encendido / apagado, idioma, método de introducción preferente, pantalla, teclas dedicadas, modo vuelo, configuración miscelánea	

-Configuración de red
Configura la transmisión de datos en red
-Ajustes de seguridad
Configure las opciones de seguridad bajo este menú de forma que el teléfono o la tarjeta SIM no0 puedan utilizarse de forma ilegal.
-Conectividad
A través del Bluetooth, puede enviar archivos a otro dispositivo que se pueda emparejar con este móvil.
- Tono humano falso
Interruptor para la emisión de voz
-SOS
Configura el interruptor y el número de SOS; mantener pulsada la tecla OK en caso de emergencia puede marcar el número SOS configurado y enviará automáticamente un mensaje corto de ayuda
-Restaurar la configuración
Restaura toda la configuración como anteriormente.
Centro de llamadas
Ver las llamadas perdidas, realizar llamadas, registros de llamadas recibidas, y guardar, eliminar vistas, etc. El usuario asimismo puede configurar la remarcación de audio, conexión de avisos, modo respuesta, voz mágica, llamada en espera, desvío de llamadas, bloqueo de llamadas, etc.
Mensaje
-Escribir mensaje
Para crear un nuevo SMS
-Bandeja de entrada
Para ver los mensajes recibidos
-Borradores
Para guardar los mensajes que no están listos para enviarse, para editarlos más y después enviarlos.
-Bandeja de salida
Para ver el mensaje enviado o aquellos que no se han enviado correctamente.
-Mensajes enviados
Para ver los mensajes que ya se han enviado.
-Ajustes de SMS
Configura y guarda los parámetros de servicio SMS de la tarjeta SIM.
Recordatorio
Encienda o apague la alarma, configure los parámetros de la alarma, y guárdelo. En este teléfono se pueden configurar hasta 5 alarmas y la alarma asimismo funcionará cuando el teléfono esté apagado.
Herramientas
Para realizar las propiedades incluyendo servicios, organizador de archivos, calculadora, calendario, reloj mundial, atajos de teclado.

5 Información y avisos de seguridad

Antes de usar el teléfono, lea detenidamente las precauciones de seguridad y deje que los niños las conozca de forma que pueda usar el teléfono de forma correcta y segura .

No encienda el teléfono cuando esté prohibido el uso del teléfono o cuando el uso del teléfono pueda causar interferencias o peligros.
No use el teléfono mientras conduce.
Siguiendo las normas y reglamentos de los hospitales y otras ocasiones, apague el teléfono cuando se encuentre cerca de equipo médico.
Apague el teléfono cuando se encuentre en un avión. El teléfono puede causar interferencias a las señales de control del avión.
Apague el teléfono cuando esté cerca de dispositivos electrónicos de alta precisión. El teléfono puede afectar al rendimiento de estos dispositivos.
No intente desmontar usted mismo el teléfono o sus accesorios. Solo se permite realizar el mantenimiento o reparación del teléfono a personal cualificado.
No coloque el teléfono o sus accesorios en un lugar con un fuerte campo magnético.
No coloque medios de almacenamiento magnético cerca del teléfono. La radiación del teléfono puede eliminar la información que se guarde en el mismo.
No coloque el teléfono en un lugar con temperaturas elevadas con gases inflamables como en una estación de servicio.
Mantenga el teléfono y los accesorios alejados de los niños. No permita que los niños usen el teléfono sin asesoramiento.
Para evitar problemas, use una batería y un cargador originales.

6 Problemas y soluciones habituales del teléfono

Preguntas frecuentes	Causa y solución
Fallo al encenderse	Pulse la tecla de "encendido" durante más de 1 segundo. Compruebe si la batería está debidamente conectada. Retírela y vuelva a instalarla e intente volver a encenderla. Compruebe si la batería está debidamente cargada
Fallo al conectarse a la red	Señal débil. Intente moverse a una ubicación con una señal fuerte e intente volver a conectarse a una red; Asegúrese de que no se encuentra detrás de una red de cobertura de proveedores de servicio; Asegúrese de que dispone de una tarjeta SIM válida. Póngase en contacto con su proveedor de red para obtener más información.
Error de la tarjeta SIM	Suciedad en la superficie metálica de la tarjeta SIM. Use un paño limpio para limpiar los puntos táctiles metálicos de la tarjeta SIM. La tarjeta SIM no está instalada. La tarjeta SIM está dañada. Póngase en contacto con su proveedor de servicio.
No carga	Mal contacto. Compruebe si el enchufe está bien conectado. Árguela en un entorno con una temperatura inferior a -40 °C o superior a 55 °C. Cambie el entorno de carga. La batería o el cargador presentan daños. Es necesario que lo sustituya.

DENVER®

www.denver-electronics.com



Los equipos eléctricos y electrónicos, y las pilas o baterías incluidas, contienen materiales, componentes y sustancias que pueden ser perjudiciales para su salud y para el medio ambiente, si el material de desecho (equipos eléctricos y electrónicos y baterías) no se manipula correctamente.

Los equipos eléctricos y electrónicos, y las pilas o baterías incluidas, llevan un símbolo de un cubo de basura cruzado por un aspa, como el que se ve a continuación. Este símbolo indica que los equipos eléctricos y electrónicos, y sus pilas o baterías, no deberían ser eliminados con el resto de basura del hogar, sino que deben eliminarse por separado. Como usuario final, es importante que usted remita las pilas o baterías usadas al centro adecuado de recogida. De esta manera se asegurará de que las pilas y baterías se reciclan según la legislación y no dañarán el medio ambiente.

Todas las ciudades tienen establecidos puntos de recogida, en los que puede depositar los equipos eléctricos y electrónicos, y sus pilas o baterías gratuitamente en los centros de reciclaje y en otros lugares de recogida, o solicitar que sean recogidos de su hogar. Puede obtener información adicional en el departamento técnico de su ciudad.

Por la presente, Inter Sales A/S declara que el tipo de equipo radioeléctrico BAS-18250M es conforme con la Directiva 2014/53/EU. El texto completo de la declaración EU de conformidad está disponible en la dirección Internet siguiente:

Entre en: www.denver-electronics.com y después haga clic en el ICONO búsqueda situado en la línea superior de la página web. Escriba el número de modelo: BAS-18250M. Ahora entre en la página del producto y la directiva roja se encuentra bajo descargas / otras descargas

Rango de funcionamiento de la Gama de frecuencia: 900MHz/1800MHz

Potencia de salida máxima: 5.55W

Advertencia de batería de litio en su interior

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

 
Dinamarca

www.facebook.com/denverelectronics

DENVER BAS-18250M

Guide d'utilisation

1 Ecran de téléphone

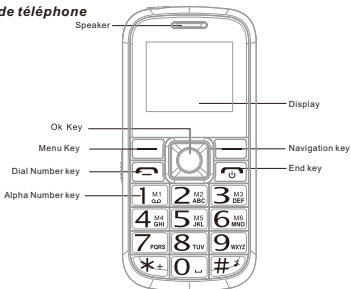

2 Clé

Clé	Fonction
Touche de numéro	Appeler ou recevoir un appel Voir les registres d'appel en mode « Veille »
Touche de fin / Touche Marche-Arrêt	Appuyer et maintenir pour allumer ou éteindre le téléphone. Fin d'appel ou rejeter un appel entrant. <u>Retourner en mode veille.</u>
Touche gauche	Accès au menu en mode veille. Confirmer pour entrer dans le menu.
Touche droite	Accès à la liste de contact en mode veille. Revenir au menu précédent.
Touche OK	Appuyer pour entrer dans le menu principal en mode veille. En mode veille, appuyer et maintenir pour activer un numéro d'urgence. Après avoir entré le numéro, appuyer sur ce bouton pour ajouter un contact.
Touche de numéro	Entrer les chiffres, lettres ou caractères. Sélectionner un article de sous-menu étiqueté au numéro correspondant.
*	Appuyer pour basculer sur *, +, (caractère de pause) P et (caractère d'attente) W. Appuyer pour déverrouiller l'écran.
#	Appuyer pour passer dans les modes d'entrée en entrant un texte. Appuyer et maintenir pour changer les profils en « Mode silencieux » et « Mode général ».
Touches de navigation	En mode veille, appuyer sur la touche Haut pour accéder à Rappel, appuyer sur la touche Bas pour accéder aux Raccourcis ; appuyer sur la touche Gauche pour accéder à Ecrire un SMS, appuyer sur la touche Droite pour accéder au Multimédia. L'utilisateur peut définir ses propres raccourcis pour les touches de navigation dans un menu, appuyer Haut, Bas, Gauche et Droite pour dérouler une option de menu.

Remarque : « Appuyer » signifie, dans ce manuel, appuyer et relâcher la touche ;
« Appuyer et maintenir » signifie appuyer sur la touche et la maintenir appuyée au moins 2 secondes.

3 Menu de fonctions

4 Menu principal

Toutes les options de menu concernant le téléphone mobile sont énumérées comme suit avec de brèves descriptions

Annuaire	
Nouveau	Pour ajouter un nouveau contact
Visualiser	Pour voir les infos de contact
Envoyer un texto	Pour envoyer un SMS au contact
Appel	Pour appeler directement le contact
Modifier	Pour modifier le nom et le numéro du contact
Supprimer	Pour supprimer l'entrée d'annuaire sélectionnée.
Copier	Pour copier le contact sélectionné à votre téléphone ou carte SIM
Marquer plusieurs	Pour envoyer des messages ou supprimer les contacts multiples
Paramétrage d'annuaire	Paramétrage pour appel rapide, appels fixes, copie de tous les contacts, déplacer tous les contacts, supprimer tous les contacts, etc.

Multimédia	
Visionneur d'image	Pour voir les images enregistrées
Lecteur vidéo	Pour jouer les vidéos enregistrées
Lecteur audio	Pour jouer la musique
Enregistreur Audio	Pour enregistrer l'audio
Radio FM	Pour recevoir la diffusion FM

Paramètres	
-Profils utilisateur	
Pour effectuer le paramétrage concernant la sécurité comprenant les généralités, le silence, les réunions, extérieur	
-Super batterie	
Entrer en mode de sauvegarde de puissance	
-Réglages SIM jumelées	
Uniquement la SIM 1 ouverte, Uniquement la SIM 2 ouverte, les deux SIM ouvertes	
-Paramètres du téléphone	
Pour ajuster l'heure et la date, allumer ou éteindre, la langue, la méthode préférée d'entrée, l'affichage, les touches dédiées, le mode avion, les réglages divers	

-Paramètres Réseau
Réglage pour la transmission des données de réseau
-Paramètres de sécurité
Régler les options de sécurité du téléphone dans ce menu pour que celui-ci ou la carte SIM ne puissent pas être utilisés illégalement.
-Connectivité
Par le biais de Bluetooth, vous pouvez envoyer des fichiers à d'autres appareils pouvant s'appairer à ce mobile.
- Voix artificielle
Commuter pour la diffusion vocale
-Appel d'urgence
Régler le commutateur et le numéro d'urgence, appuyer et maintenir la touche OK en cas d'urgence pour composer le numéro d'urgence, il enverra automatiquement un court message pour recevoir de l'aide.
-Réinitialisation des paramètres
Réinitialiser tous les paramètres d'origine.
Centre d'appels
Voir les appels manqués, appeler, voir les registres des appels reçus, et sauvegarder ou supprimer des images, etc. L'utilisateur peut également régler l'appel de retour automatique, un rappel de l'heure, connecter une notice, mode réponse, voix magique, attente d'appel, détourner un appel, bloquer un appel, etc.
Message
-Écrire un message
Pour créer un nouveau SMS
-Boîte de réception
Pour voir les messages reçus.
-Brouillons
Pour enregistrer les messages qui ne sont pas prêts à être envoyés, pour modifier plus tard puis envoyer.
-Boîte d'envoi
Pour voir le message en cours d'envoi ou n'ayant pas pu être envoyé
-Messages envoyés
Pour voir les messages déjà envoyés.
-Paramètres SMS
Règle et enregistre les paramètres de service SMS de la carte SIM.
Rappel
Activer et désactiver l'alarme, régler les paramètres d'alarme et enregistrer. Jusqu'à 5 alarmes peuvent être réglées avec ce téléphone, et l'alarme fonctionnera également quand le téléphone est éteint.
Outils
Pour les dispositifs comme Services, Gestion de fichier, Calculatrice, Calendrier, Horloge internationale, Raccourcis

5 Informations et notices de sécurité

Avant d'utiliser le téléphone, veuillez lire attentivement les précautions de sécurité et les transmettre aux enfants pour pouvoir utiliser votre téléphone correctement et en sécurité.

Ne pas allumer votre téléphone quand cela est interdit ou si le téléphone peut causer des interférences ou du danger.
Ne pas utiliser votre téléphone en conduisant.
Selon les règles ou la réglementation des hôpitaux et autres, éteindre votre téléphone quand vous êtes à proximité d'un équipement médical.
Eteindre votre téléphone quand vous êtes en avion. Le téléphone peut occasionner des interférences sur les signaux de contrôle de l'avion.
Eteindre votre téléphone quand vous êtes à proximité d'appareils électroniques de haute précision. Le téléphone peut affecter les performances de ces appareils.
Ne pas essayer de démonter vous-même le téléphone ou ses accessoires. Seul un personnel qualifié est autorisé à réviser ou réparer le téléphone.
Ne pas placer le téléphone ou ses accessoires dans des endroits subissant un fort champ électromagnétique.
Ne pas placer de stockage magnétique près du téléphone. Les radiations du téléphone peuvent supprimer les informations qui y sont stockées.
Ne pas mettre le téléphone dans un endroit de haute température avec un gaz inflammable comme une station essence.
Tenir le téléphone et ses accessoires à l'écart des enfants. Ne pas laisser les enfants utiliser le téléphone sans les avoir guidés.
Pour éviter les problèmes, veuillez utiliser la batterie et le chargeur d'origine.

6 Problèmes communs au téléphone et solutions

Foire aux questions	Cause et solution
Impossible de l'allumer	Appuyer sur « Marche-Arrêt » pendant 1 seconde. Vérifier si la batterie est correctement connectée. L'enlever et la remettre, et réessayer de l'allumer. Vérifier si la batterie est correctement chargée.
Impossible de se connecter au réseau	Signal faible. Essayer de changer de lieu ayant un signal puissant et réessayer de connecter au réseau. Veuillez vous assurer que vous n'êtes pas hors de la couverture de réseau des fournisseurs de service. Veuillez vous assurer d'avoir une carte SIM valable. Veuillez contacter votre fournisseur de réseau pour plus d'informations.
Erreur de carte SIM	Saleté sur la surface métallique de la carte SIM. Essuyer les points de contact de la carte SIM avec un chiffon propre. La carte SIM n'est pas installée. La carte SIM est endommagée. Veuillez contacter votre fournisseur de service.
Impossible de charger	Mauvais contact. Vérifier si la fiche est bien connectée. Ne pas charger sous des températures inférieures à - 40°C ou supérieures à 55°C. Changer d'environnement à des températures correctes pour charger. La batterie ou le chargeur est endommagé. Vous devez la ou le remplacer.

DENVER®

www.denver-electronics.com



Les appareils électriques et électroniques et les batteries contiennent des matériaux, composants et substances qui peuvent nuire à votre santé et à l'environnement si ces déchets ne sont pas traités de façon appropriée.

Les appareils électriques et électroniques et les batteries sont marqués par le symbole de poubelle avec roulettes et une croix dessus, voir ci-dessous. Ce symbole indique que les appareils électriques et électroniques et les batteries doivent être collectés et jetés séparément des ordures ménagères.

En tant qu'utilisateur final, il est important que vous jetiez les batteries usagées dans des centres de collecte appropriés. En mettant en rebus les batteries pour être recyclées conformément à la réglementation vous contribuez à préserver l'environnement.

Dans toutes les villes existent des points de collecte où les appareils électriques et électroniques et les batteries peuvent y être déposés sans frais pour le recyclage. Vous pouvez obtenir des informations supplémentaires auprès des autorités locales de la ville.

Le soussigné, Inter Sales A/S, déclare que l'équipement radioélectrique du type BAS-18250M est conforme à la directive 2014/53/EU. Le texte complet de la déclaration EU de conformité est disponible à l'adresse internet suivante: Veuillez entrer dans le site :

www.denver-electronics.com, puis cliquez sur l'ICÔNE de recherche sur la ligne supérieure du site Web. Entrez le numéro de modèle : BAS-18250M

Maintenant, accédez à la page du produit, et la directive rouge est indiquée sous les téléchargements/autres téléchargements

Plage des fréquences de fonctionnement: 900MHz/1800MHz

Puissance de sortie maximale: 5.55W

Avertissement concernant la batterie au lithium à l'intérieur

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

 
Denmark

www.facebook.com/denverelectronics

DENVER BAS-18250M

Guida per l'utente

1 Vista del telefono

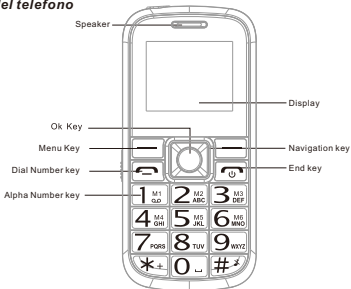

2 Tasti

Tasto	Function
Tasto di composizione numeri	Consente di effettuare o rispondere a una chiamata Consente di visualizzare i registri delle chiamate in modalità "standby"
Tasto fine/accensione	Tenere premuto per accendere/spegnere il telefono. Consente di terminare una chiamata o rifiutare una chiamata in arrivo. Consente di ritornare alla modalità di inattività.
Tasto sinistro	Consente di accedere al menu in modalità inattiva. Consente di confermare per accedere al menu.
Tasto destro	Consente di accedere all'elenco contatti in modalità inattiva. Consente di ritornare al menu precedente.
Tasto numero	Premere per accedere al menu principale in modalità inattiva. In modalità inattiva, tenere premuto per avviare SOS. Dopo aver inserito il numero, premere questo pulsante per aggiungere un contatto.
Number Key	Consente di inserire numeri, lettere o caratteri. Consente di selezionare una voce di sottomenu etichettata con il numero corrispondente.
*	Consente di alternare tra *, +, (carattere di pausa) P e (carattere di attesa) W. Consente di sbloccare lo schermo.
#	Consente di cambiare modalità di inserimento durante l'immissione di testo. Tenendolo premuto, consente di modificare i profili in "Modalità silenziosa" e "Modalità generale".
Navigation Keys	In modalità inattiva, premere il tasto Su per accedere a Promemoria, premere il tasto Giù per accedere a Scelte rapide; premere il tasto sinistro per accedere a Scrivi SMS, premere il tasto destro per accedere a Multimedia. L'utente può definire le proprie scelte rapide per i tasti di navigazione all'interno di un menu, premere su, giù, sinistra e destra per scorrere l'opzione del menu.

Nota: "Premere" in questo manuale, significa premere e rilasciare il tasto; "Tenere premuto" significa tenere premuto il tasto per almeno 2 secondi.

3 Menu funzioni

4 Menu principale

Tutte le opzioni di funzione sul telefono cellulare sono elencate di seguito con brevi descrizioni

Rubrica telefonica	
Nuovo	Consente di aggiungere un nuovo contatto
Guarda	Consente di visualizzare informazioni di contatto
Consente di inviare un messaggio di testo	Consente di inviare SMS a un contatto
Chiamata	Consente di chiamare direttamente il contatto
Modifica	Consente di modificare il nome e il numero del contatto
Cancella	Consente di cancellare la voce della rubrica selezionata.
Copia	Consente di copiare il contatto selezionato sul telefono o sulla scheda SIM
Contrassegna diversi	Consente di inviare messaggi o eliminare più contatti
Impostazione della rubrica	Impostazioni per la selezione rapida, composizione fissa, copia di tutti i contatti, spostamento di tutti i contatti, eliminazione di tutti i contatti, ecc.

Multimedia	
Visualizzatore immagini	Consente di riprodurre le immagini salvate
Lettore video	Consente di riprodurre il video registrato
Lettore musicale	Consente di riprodurre musica
Registratore di suoni	Consente di registrare audio
Radio FM	Consente di ricevere trasmissioni FM
Impostazioni	
-Profili utente	
Consente di eseguire le impostazioni relative alla sicurezza tra cui generale, silenzioso, riunione, all'aperto	
-Batteria super	
Consente di entrare in modalità di risparmio energetico	
-Impostazioni doppia SIM	
Solo SIM 1 aperta, solo SIM 2 aperta, doppia SIM aperta	
-Impostazioni del telefono	
Per impostare elementi come data e ora, accensione/spegnimento, lingua, metodo di immissione preferito, display, tasti dedicati, modalità volo, impostazioni misc.	

-Impostazioni di rete
Consente di impostare la trasmissione dei dati di rete
-Impostazioni di protezione
Impostare le opzioni di sicurezza del telefono in questo menu in modo che il telefono o la scheda SIM non possano essere illegalmente utilizzati
-Connettività
Attraverso il Bluetooth, è possibile inviare file ad altri dispositivi che possono accoppiare questo cellulare.
- Tono voce umana falsata
Passa alla trasmissione vocale
-SOS
Impostare l'interruttore e il numero SOS. In caso di emergenza tenendo premuto il tasto OK è possibile chiamare il numero SOS impostato che invierà automaticamente un breve messaggio di aiuto
-Ripristina impostazioni
Consente di ripristinare tutte le impostazioni precedenti.
Centro chiamate
Consente di visualizzare le chiamate perse, effettuare chiamate, registrare le chiamate ricevute e salvare, eliminare visualizzazioni, ecc. L'utente può anche impostare la ricomposizione automatica, il promemoria del tempo di chiamata, la notifica di connessione, la modalità di risposta, la voce magica, l'avviso di chiamata, il trasferimento di chiamata, il blocco delle chiamate, ecc.
Messaggio
-Scrivi messaggio
Consente di creare un nuovo SMS
-Posta in arrivo
Consente di visualizzare i messaggi ricevuti
-Bozze
Consente di salvare i messaggi che non sono pronti per l'invio, per ulteriori modifiche, e quindi inviare.
-In uscita
Consente di visualizzare il messaggio in invio o inviato senza successo
-Messaggi inviati
Consente di visualizzare i messaggi che sono già stati inviati.
-Impostazioni SMS
Consente di impostare e salvare i parametri del servizio SMS della scheda SIM.
Promemoria
Consente di attivare o disattivare la sveglia, impostare i parametri della sveglia e salvare. Per questo telefono è possibile impostare fino a 5 sveglie che funzioneranno anche quando il telefono è spento.
Strumenti
Consente di eseguire funzioni tra cui Servizi, Gestione file, Calcolatrice, Calendario, Orologio mondiale, Scelte rapide

5 Informazioni e avviso sulla sicurezza

Prima di utilizzare il telefono, leggere attentamente le precauzioni di sicurezza e informarne i bambini, in modo da poter utilizzare il telefono in modo corretto e sicuro.

Non accendere il telefono quando è vietato o quando l'uso del telefono può causare interferenze o situazioni di pericolo.

Non utilizzare il telefono mentre si è alla guida.

Spegnere il telefono quando si è vicini ad apparecchiature mediche e seguire le regole o i regolamenti di ospedali e altre strutture.

Spegnere il telefono quando si è in aereo. Il telefono potrebbe causare interferenze ai segnali di controllo dell'aereo.

Spegnere il telefono quando ci si trova in prossimità di dispositivi elettronici di alta precisione. Il telefono potrebbe influire sulle prestazioni di questi dispositivi.

Non tentare di smontare il telefono o gli accessori da soli. Solo il personale qualificato è autorizzato a prestare assistenza o riparare il telefono.

Non posizionare il telefono o i suoi accessori ove sia presente un forte campo elettromagnetico.

Non posizionare supporti di memorizzazione magnetici vicino al telefono. Le radiazioni dal telefono possono eliminare le informazioni memorizzate su di essi.

Non porre il telefono in un luogo ad alta temperatura con gas infiammabili come una stazione di servizio.

Tenere il telefono e i suoi accessori lontano dalla portata dei bambini. Non consentire ai bambini di utilizzare il telefono senza una guida adulta.

Per evitare problemi, utilizzare batteria e caricabatterie originali.

6 Problemi comuni del telefono e risoluzione

Domande frequenti	Causa e soluzione
Impossibile accendere il telefono	Premere il tasto di "accensione" per più di 1 secondo. Controllare se la batteria è collegata correttamente. Rimuovere e reinstallare, quindi provare ad accenderlo di nuovo. Controllare se la batteria è stata caricata correttamente.
Impossibile connettersi alla rete	Segnale debole. Provare a spostarsi in un luogo con segnale forte e a connettersi di nuovo alla rete; Assicurarsi di non essere al di fuori della copertura di rete dei fornitori di servizi; Assicurarsi di avere una scheda SIM valida. Contattare il proprio operatore di rete per ulteriori informazioni.
Errore scheda SIM	Sporco sulla superficie metallica della scheda SIM. Utilizzare un panno pulito per pulire il punto di contatto in metallo sulla scheda SIM. La scheda SIM non è installata. La scheda SIM è danneggiata. Contattare il proprio fornitore di servizi.
Impossibile caricare	Scarso contatto. Verificare se la spina è collegata bene. Caricare in un ambiente con temperatura inferiore a -40 °C o superiore a 55 °C. Cambiare l'ambiente di carica. La batteria o il caricabatterie sono danneggiati. Occorre sostituirli.

DENVER®

www.denver-electronics.com



L'attrezzatura elettrica e elettronica incluse le batterie contengono materiali, componenti e sostanze che possono essere dannose per la salute e l'ambiente se il materiale di scarto (attrezzatura elettrica ed elettronica gettata e batterie) non è gestito correttamente. L'attrezzatura elettrica ed elettronica e le batterie sono segnate con una croce sul simbolo del cestino, visto sotto. Questo simbolo significa che l'attrezzatura elettrica e elettronica e le batterie non dovrebbero essere eliminate con altri rifiuti domestici ma dovrebbero esserlo separatamente.

E' importante che inviate le batterie usate alle strutture appropriate e indicate. In questo modo vi accertate che le batterie siano riciclate secondo la legislatura e non danneggiano l'ambiente.

Tutte le città hanno stabilito punti di raccolta dove l'attrezzatura elettronica ed elettrica e le batterie possono essere inviate senza spese alle stazioni di riciclaggio e altri siti di raccolta o raccolti da casa. Informazioni aggiuntive sono disponibili al dipartimento tecnico della città.

Il fabbricante, Inter Sales A/S, dichiara che il tipo di apparecchiatura radio BAS-18250M è conforme alla direttiva 2014/53/EU. Il testo completo della dichiarazione di conformità EU è disponibile al seguente indirizzo Internet: Accedere a : www.denver-electronics.com e fare clic sull'icona di ricerca nella riga superiore della pagina Web, quindi immettere il numero di modello: BAS-18250M

Accedere alla pagina del prodotto e leggere le istruzioni riportate alla voce download/altri download

Campo operativo di frequenze:900MHz/1800MHz

Potenza massima di uscita:5.55W

Avvertenza relativa alla batteria al litio all'interno

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Danimarca

www.facebook.com/denverelectronics